
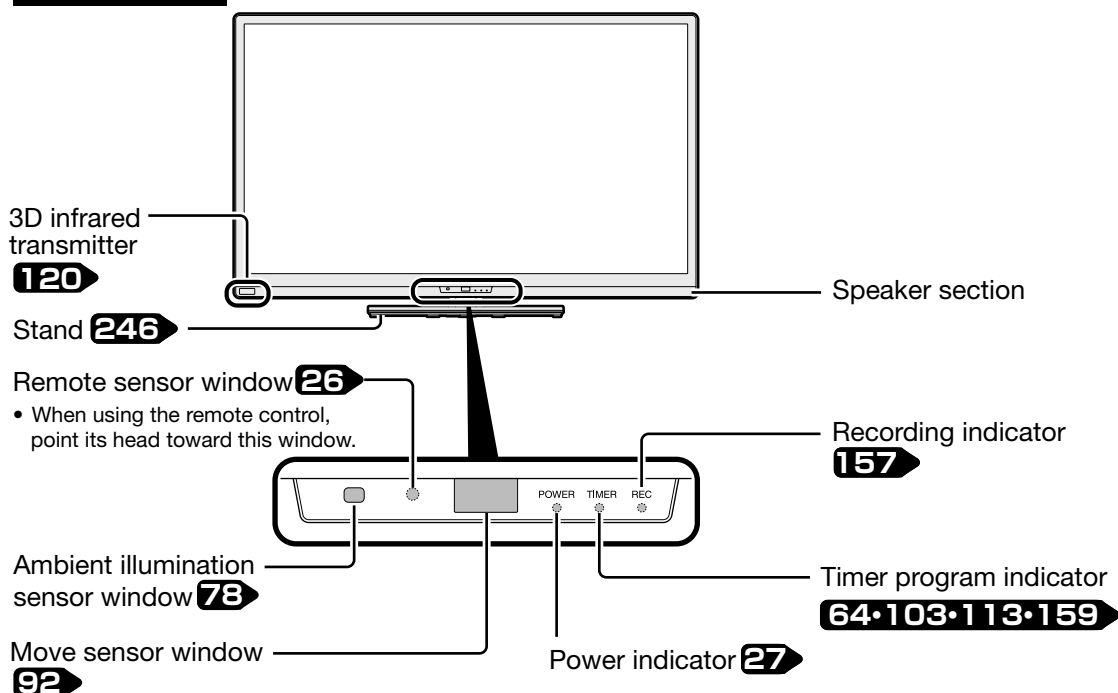


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.


Right side view

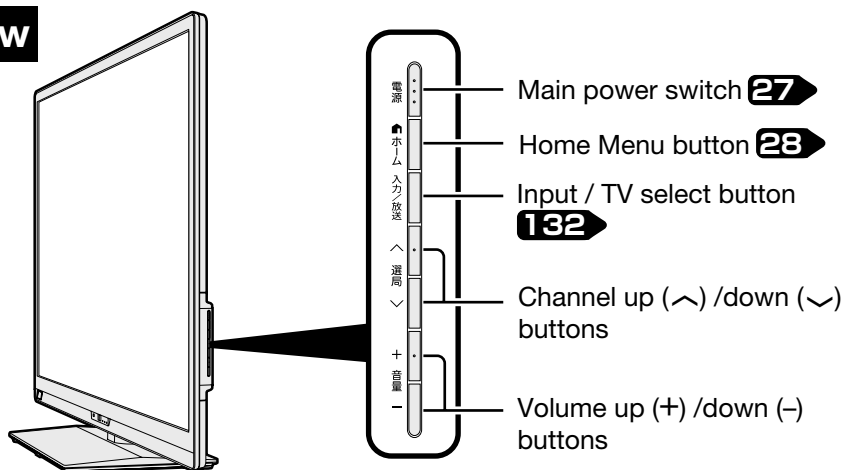

Back view

The illustrations below are those of LC-52Z5.

LC-60Z5/LC-46Z5/LC-40Z5 has the same layout of jacks and terminals as LC-52Z5.

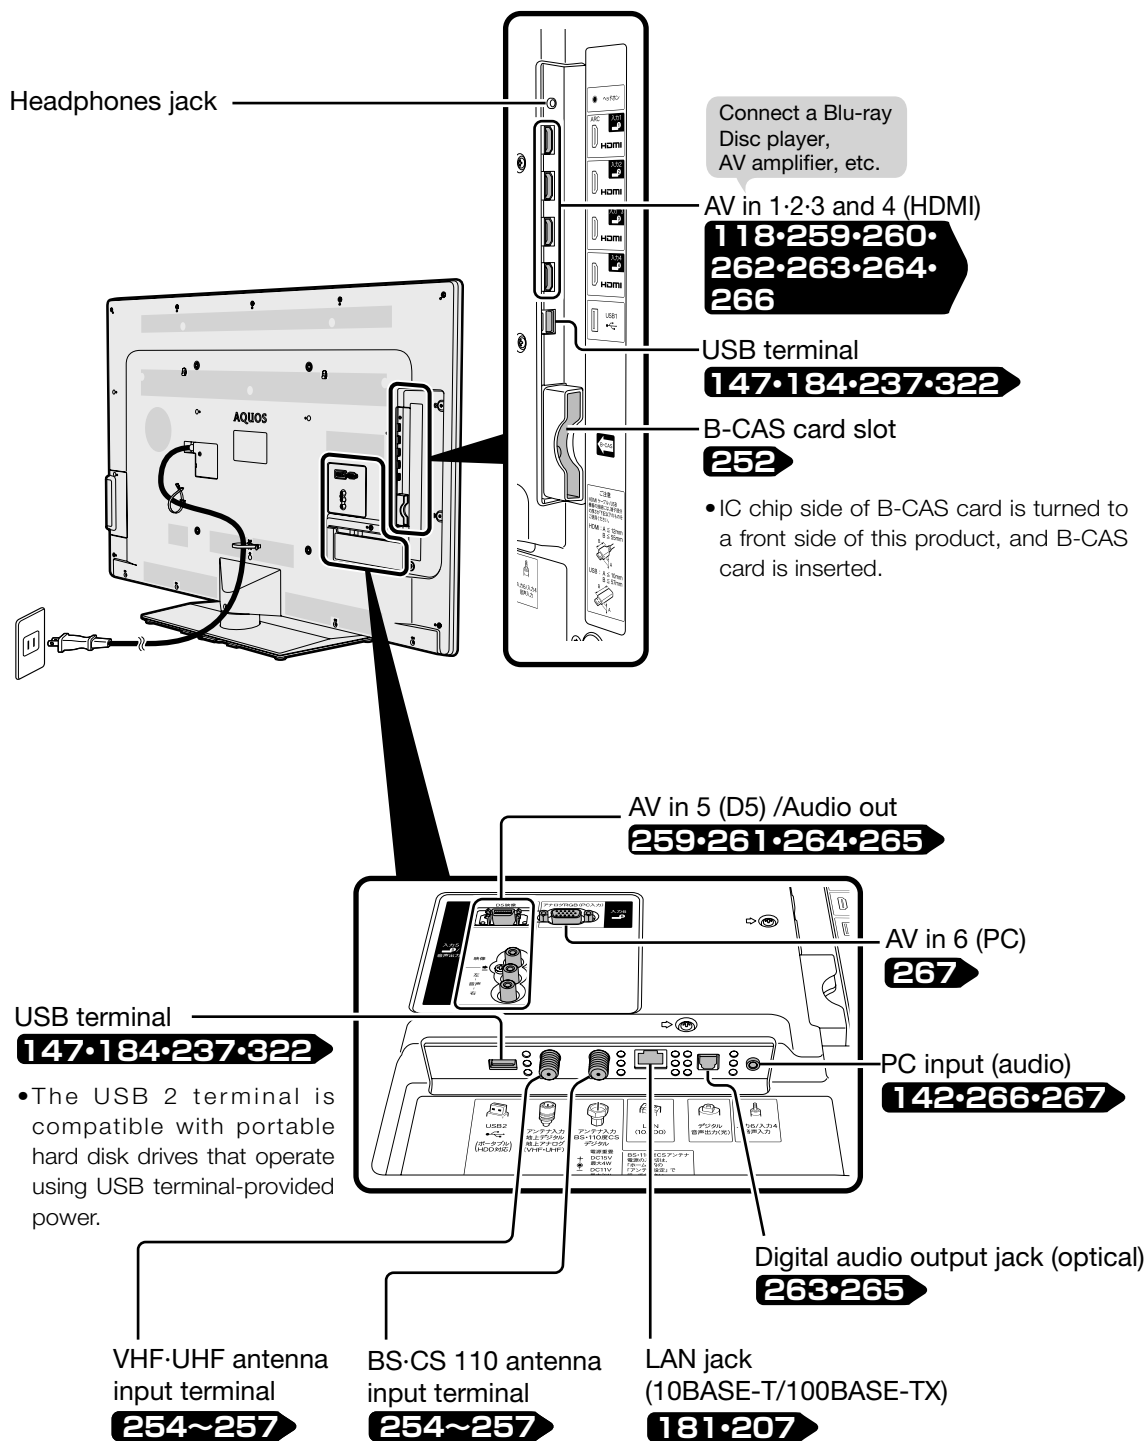

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリンク

3D映像を見る

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録る・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
（仕様や素子）

English
Guide

Remote Control Unit

Active/Standby **27**

Press to engage the TV set in the active or standby mode.

地上 Terrestrial digital select **33**

Terrestrial analog select **33**

BS BS select **33**

CS CS select **33**

When selecting the CS digital channel for the first time. **275**

データ連動

d Linked data broadcast **36・213**

Press to call the data broadcast linked with the current digital TV program.

消音 Mute **33・212**

Press to mute audio.

音量 (+) / 音量 (-) Volume up (+) / down (-) **33・212**

Press to adjust the volume.

番組表(予約) EPG **46・112・159**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム Display the "Home" Menu **28・29**

Press to start some useful operations of the TV.

番組情報

Program info **39**

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

録画消去

Delete recording **177**

Press to delete a title recorded on the USB-HDD.

Split screen **56~57**

Press to switch between the split screen mode and the normal screen mode.

操作切替

Operable screen **58**

Press to switch the operable screen when the TV set is in the split screen mode.

Freeze **37**

Press to freeze the picture.

3桁入力

Digital channel number input **34**

Use to select a digital channel by entering the 3-digit channel number.

画面表示

Display **38・39・327**

Press to display or turn off the channel call, etc.

AVボジション


AV mode select **73**

Press to select the picture/sound setting that best matches the current program.

オフタイマー

Sleep timer **96**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

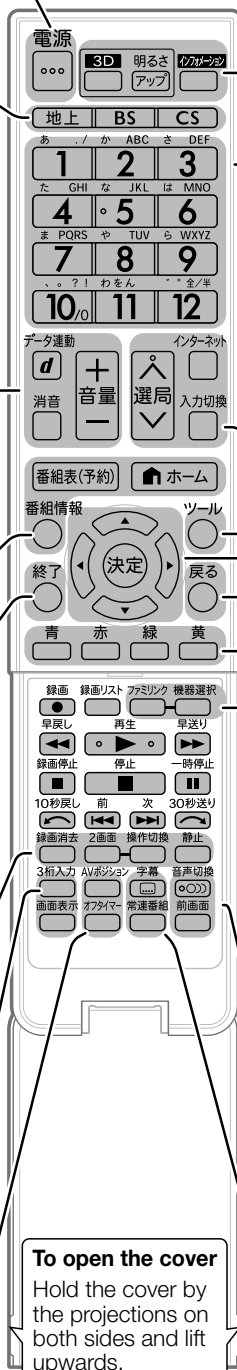

To open the cover
Hold the cover by the projections on both sides and lift upwards.

3D

3D **122~124・126・127**

Press to switch to 3D mode when the TV set receives a 3D signal.

明るさ

アップ 3D brightness adjustment **128**

Each time you press this button the brightness of 3D images is adjusted.

インフォメーション

Information **35**

Press to display AQUOS Information.

Channel select **33・212**

- Press to select a channel.
- Use to input a number for various settings.

インターネット

Internet **197・212・216・218・220**

Press to connect to the internet.

入選周

Channel up (^) / down (v) **33・43・212**

Press to select channels in the ascending or descending order.

* CATV channels are factory set to be skipped. **293**

入力切替

Input select **132**

Press to select the input.

Display the Tool Menu **28・29・32**

Cursor (up, down, left, right) **28・29**

Use to select a menu item, column, etc.

決定

Enter/Confirm **28・29**

Press to confirm a selected setting or menu item.

Return **28**

Press to go back to the previous screen.

Color **36・47~51・98**

Use to operate EPGs and data program screens.

Familink **108~111・113~116・118・157・158・168~171**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切替

Audio select **60・213**

Press to select the audio.

前画面

Previous screen

Press to return to the most recently viewed channel or input.

字幕

Caption **60・213**

Press to display, select, or turn off captions when watching a digital program with captions.

常連番組

Recommended programs select **54~55**

Press to select a program which the TV set recommends.

Switching the Display Language to English ホームメニューなどの言語を英語にする


- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press



and select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select with



Press



Select “Language(言語)”.
「Language(言語)」を選ぶ



4

Select with



Press



Select “English”.
「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press



Finish this operation.

終了する

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリーリンク

3D映像を見る

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録る・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide